




Hinton Cast Iron
Electric Stove
Installation Manual
&
User Instructions



Nothing like a British Fire.

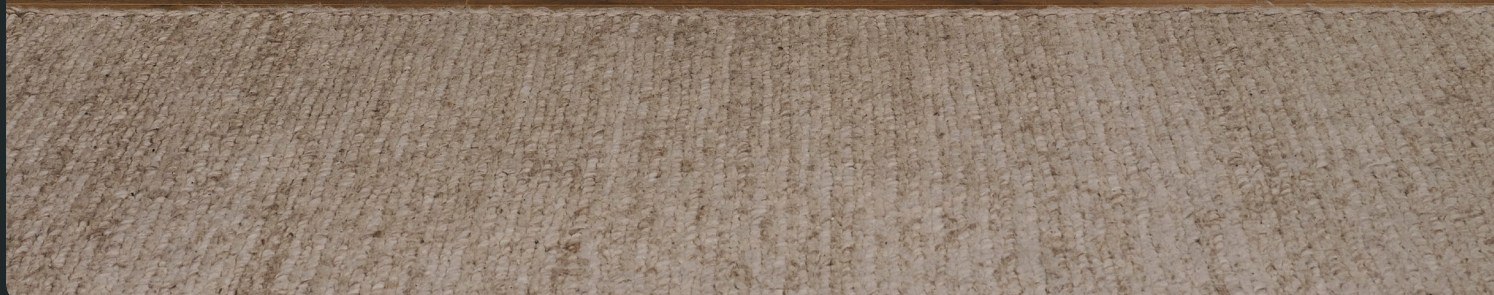

THIS IS HOME

Table of contents

1.0 Important notes	1-2
2.0 Installation requirements	3
3.0 Site requirements	3-4
4.0 Clearances to combustibles	4
5.0 Unpacking the appliance	4
6.0 Component checklist	5
7.0 Appliance data for the Hinton Stove	6
8.0 Removing the deluxe logs	7-9
8.1 Installing the deluxe logs	10-12
8.2 Preparing the appliance	13
User Instructions	15

IMPORTANT: Please read completely through the instructions and verify that all listed parts are present before assembly.

1.0 Important notes

These instructions should be read carefully and retained for future reference.

When using this electrical appliance, basic precautions should be followed to reduce the risk of fire, electric shock and injury to person, including the following:

- This heater must be used on an AC supply only and the voltage marked on the heater's rating label must correspond to the supply voltage.
- DO NOT switch the appliance on until it is properly installed as described in this manual.
- This appliance can be used by children aged from eight years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than three years should be kept away unless continuously supervised. Children aged from three years and less than eight years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from three years and less than eight years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION: Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Check that all parts included are intact and not damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Never use the appliance if the cord or any part of the appliance shows signs of damage. The heater must not be located immediately below a socket-outlet.

DO NOT use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

WARNING: In order to avoid overheating, do not cover the fan of the heater.

-  DO NOT use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

CAUTION: In order to avoid a hazard due to inadvertent re-setting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or

connected to a circuit that is regularly switched on and off by the utility.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Keep furniture, curtains and other fabric material away from appliance.

DO NOT leave appliance unattended during use.

DO NOT run the cable plug under carpets, rugs etc.

 DO NOT cover or obstruct the heater in any way. Overheating will result if it is accidentally covered.

Never immerse the appliance in water or any other liquids.

DO NOT use the appliance outdoors.

Before cleaning the appliance, unplug it from the power source and check it is cooled down.

DO NOT clean the appliance with abrasive chemicals.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and/or damage to the appliance.

DO NOT insert or allow foreign objects to enter the inlet or outlet vents as this may result in electric shock, fire or damage to the appliance.

DO NOT install the fire using an extension cord.

Unplug from the mains supply if the appliance is not to be used for long periods.

This appliance is only suitable for well-insulated spaces or occasional use.

DO NOT use this appliance in an open flue.

This appliance is not intended to be used as a primary source of heat.

SAVE THESE INSTRUCTIONS

2.0 Installation requirements



Supplied with a pre-wired three pin BS1363 plug (13 Amp fuse rated) and 2.1 metres of electrical flex. Ensure an electric socket is located within this distance and is easily accessible.



The Hinton stove is suitable for installing in mobile park homes.



If the appliance is hard-wired to a 240 V fused spur that is external to the installation and easily accessible, any electrical work must be carried out by a service agent or other competent person, such as a qualified electrician.



The flooring beneath the stove must be capable of withstanding the heat generated by the appliance. If in doubt, install the stove on a non-combustible plinth or hearth that extends at least 6 inches (150 mm) beyond the stove on all sides.



Position the stove on a firm, level surface.



If the stove is installed in a fire surround, confirm the surround is suitable for electric heaters with the manufacturer. For open-draft fireplaces, block-off the chimney to prevent drafts that could trigger the fan heater's safety cut-out system.

3.0 Site requirements

It should be noted that the Hinton stove creates warm convected air currents. These currents move heat from the room surroundings to, and up the wall surfaces adjacent to the heater. Installing the heater next to these types of wall coverings or operating the heater where impurities in the air, such as tobacco smoke exist, may slightly discolor wall finishing.

3.0 Site requirements - Cont

DO NOT	run the supply cable under carpets
DO NOT	install in a position where curtains or drapes could cover the appliance, or other soft materials could cover e.g. below a coat rack.
DO NOT	install behind an opening door where damage could occur.
DO NOT	install where the supply cable would become a trip hazard.
DO NOT	sit, stand or forcefully pull on the appliance.
DO NOT	obstruct, cover or force items into the openings.
DO NOT	use the heater to dry clothes.
DO NOT	install / operate outdoors.

It is important that the following clearances are maintained from the appliance to combustible materials. These clearances are dependent on the securing location as defined on the following pages.

4.0 Clearances to combustibles

The minimum clearance distance to the front of the Hinton stove is 3ft (914mm).

No minimum clearance is required above the appliance; however, curtains, drapes and other combustible materials must be kept clear.

5.0 Unpacking the appliance

The appliance is supplied fully assembled in a protective wooden crate. A cross-head screwdriver is required to dismantle the crate.

Manual Handling

WARNING:

This appliance is heavy. Before attempting installation, check the appliance weight and assess whether manual handling is appropriate. Installation should be carried out by at least two competent persons. Where necessary, use suitable mechanical lifting equipment.

Before lifting:

- Plan the lifting route and remove any trip hazards.
- Wear suitable protective gloves and safety footwear.
- Keep the appliance upright during transport.
- Lift only from the main body of the appliance.
- Never lift by the door, glass, top panel, decorative castings or electrical components.
- If the load cannot be handled safely, do not attempt to lift manually.

Please dispose of all packaging with care at your local recycling centre.

6.0 Component checklist

Component	Quantity
Stove & heater assembly	1
User instruction booklet	1
Remote Control	1
AAA Batteries	2
Levelling feet	4
Deluxe log set	1

IMPORTANT: The data label, including the model and serial number can be found on the rear of the appliance


BRITISH FIRES
Unit 10, Avon Trading Park, Reid Street,
Christchurch, Dorset, BH23 2BT
RBK House, Irishtown, Athlone,
Co. Westmeath, N37 XP52, Ireland
Tel: 0800 169 9911
www.britishfires.com

Hinton LED Electric Stove
Model: SK5353
Heater: 1260W - 1500W
Volts: 220-240V ~ 50Hz
Lighting: LED
Fuse: 13Amp

CE
UK CA


01W24

S/N: XXXX2024XX00001

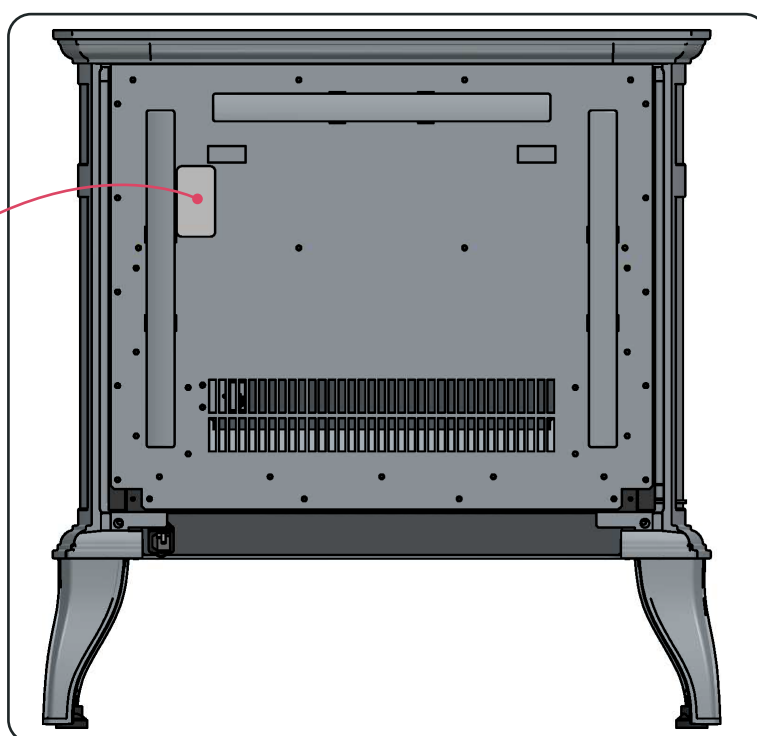

7.0 Appliance data for the Hinton Stove


Heat output	Symbol	Value	Unit
Nominal heat output	P_{nom}	1.5	kW
Minimum heat output (indicative)	P_{min}	N/A	kW
Maximum continuous heat output	$P_{max, c}$	1.5	kW
Power consumption	Symbol	Value	Unit
Off	P_o	N/A	W
Standby	P_{sm}	0.45	W
Idle	P_{idle}	0.45	W
Network standby	P_{nsm}	N/A	W
Standby mode with display of information or status		No	
Seasonal space heating energy efficiency in active mode	$\eta_{s,on}$	90.0	%
Types of heat output / room temperature control			Y/N
Single stage heat output and no room temperature control			No
Two or more manual stages, no room temperature control			No
Mechanic thermostat room temperature control			No
Electronic room temperature control			No
Electronic room temperature control plus day timer			No
Electronic room temperature control plus week timer			Yes
Other control options			Y/N
Room temperature control with presence detection			No
Room temperature control with open window detection			No
Distance control option			No
Adaptive start control			No
Working time limit			No
Black bulb sensor			No
Self-learning functionality			No
Control accuracy			No
Hinton Stove Specifications			
Dimensions	H 628 x W 613 x D 371.5 mm		
Weight	56kg		
Power supply	220 - 240V AC, 50Hz		
Heating elements	1260 - 1500W		
Lighting	LED		
Location	Indoor use only		
Approvals	CE UKCA		
Power cable	BS1363 / 2.1 Metres long		

This fire is fitted with Light Emitting Diodes (LEDs) in place of conventional bulbs. LEDs generate the same light levels as conventional bulbs, but use a fraction of the energy consumed.

8.0 Removing the deluxe logs


Removing the deluxe real logs from the appliance

1. Remove the cover plate by unscrewing the two M3 screws using a cross-headed screwdriver. If necessary, use a flat-head screwdriver to gently prise the cover plate away from the top panel.

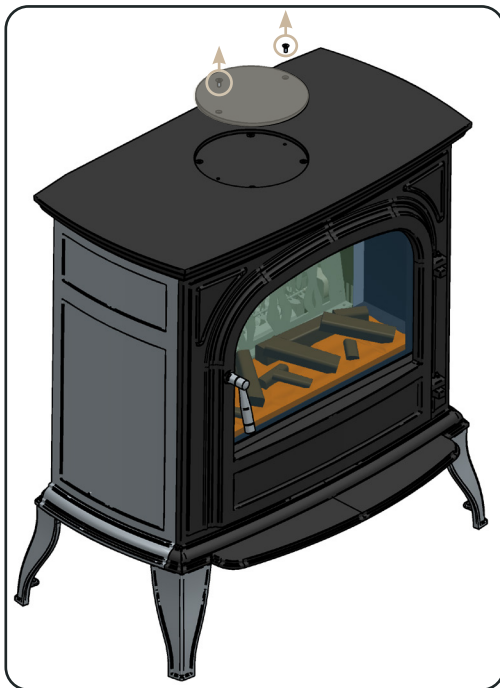

○ Blanking plate


-
2. Using a cross-head screwdriver, remove the 4 × M5 screws located beneath the cover plate, then remove the top panel.

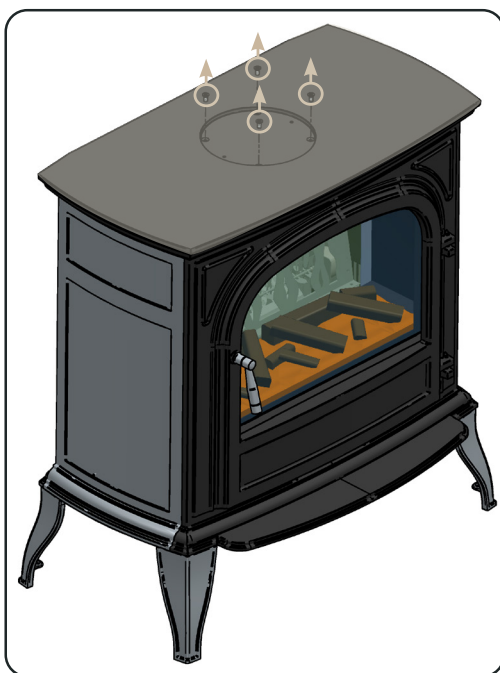

○ Top panel


8.0 Removing the deluxe logs - Cont.

3. Next, unscrew the 1x M6 screw holding the front casting in position. Remove the front casting and place safely to one side.

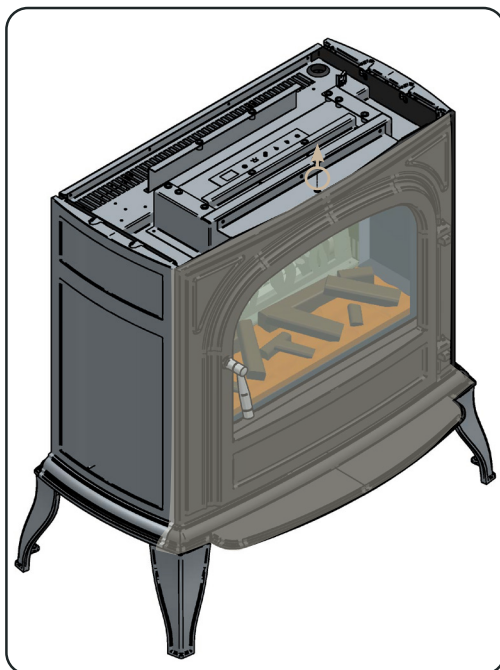

○ Front panel

-
4. Remove the 4 x firebox screws holding the glass retaining bracket in position.

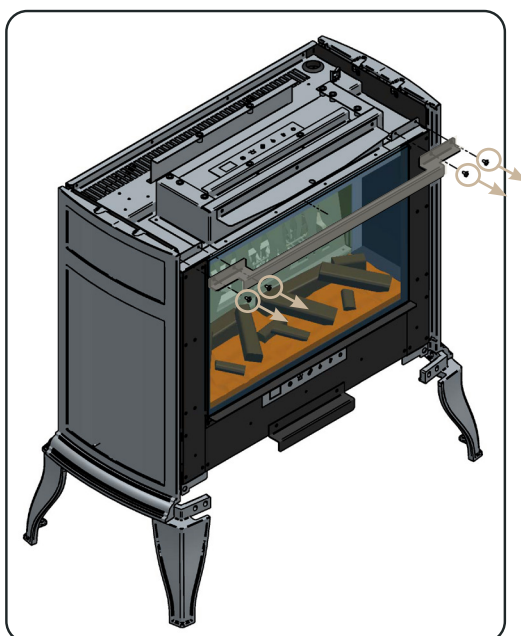

○ Front panel

Ensure the glass is supported at all times! We strongly recommend protective gloves are used when handling glass.

8.0 Removing the deluxe logs - Cont.

5. Carefully lift the glass up and out of the appliance and place safely on a soft, flat surface.



○ Front glass

Ensure the glass is supported at all times! We strongly recommend protective gloves are used when handling glass.

6. Remove the 2 x transit screws holding the deluxe log set in place, Carefully lift the log set up and tilt at a 45° angle, bringing the log set out through the front of the stove. Set aside.



● Screws

○ Deluxe logs

8.1 Installing the deluxe logs


How to install the deluxe real logs into the appliance

1. Install the deluxe log fuelbed in through the front of the stove at a 45° angle.



○ Deluxe logs

2. Carefully, reinstall the glass back into the appliance.

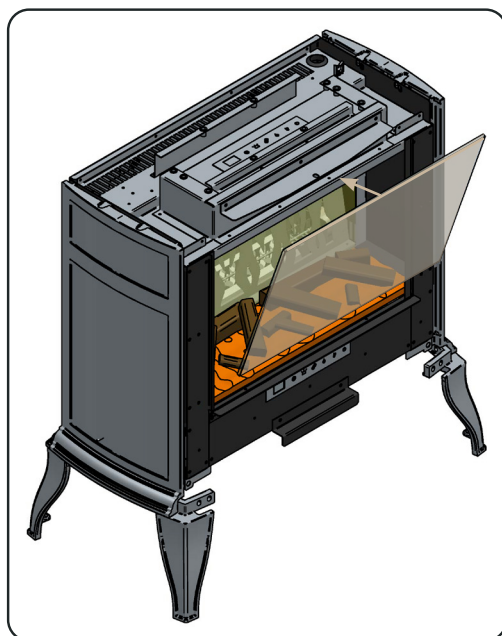


○ Front glass

Ensure the glass is supported at all times! We strongly recommend protective gloves are used when handling glass.


8.1 Installing the deluxe logs - Cont.

3. Re-install the glass retaining bracket by securing it with the 4 firebox screws.

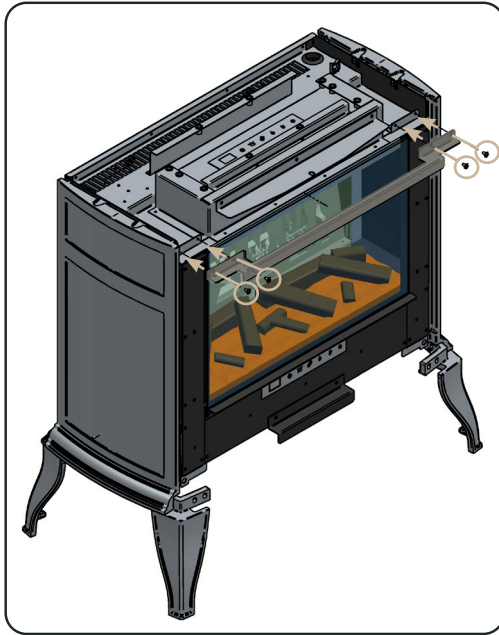

○ Glass retaining bracket

-
4. Next, re-install the front casting and secure it with the 1 × M6 screw.

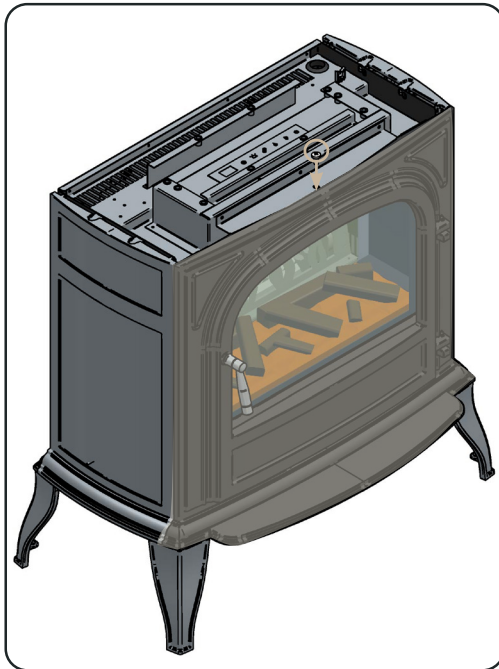

○ Front panel


8.1 Installing the deluxe logs - Cont.

5. Using a cross-head screwdriver, secure the top panel with the 4 × M5 screws.



○ Top panel

-
6. Re-install the cover plate, securing it with the 2 × M3 screws using a cross-head screwdriver.

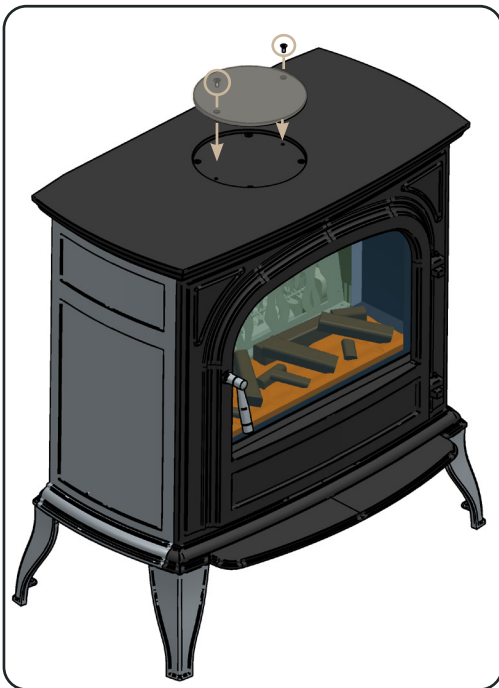


○ Cover plate

8.2 Preparing the appliance

Fitting the leveling feet

1. Situate the LED stove in the desired location, if the surface is uneven, fit the leveling feet behind the cast legs. Turn anticlockwise to extend the feet and clockwise to retract them. The appliance level can be checked using a spirit level.

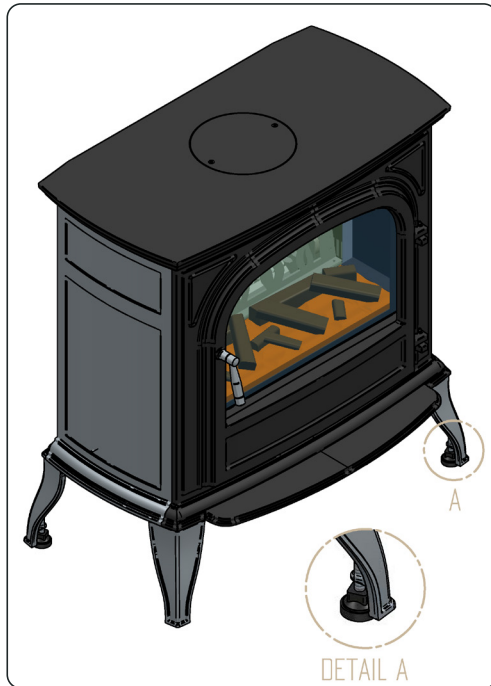



Nothing like a British Fire.

User Instructions

9.0 Pairing the remote control	16
10.0 Operating the appliance	17-22
11.0 Safety Cutout System	22
12.0 Cleaning and maintenance	22
13.0 Troubleshooting guide	23
14.0 Spare parts	24
15.0 Specification sheet – Fireboxes	25
16.0 Servicing	26
17.0 Terms & conditions, guarantee	27

9.0 Pairing the remote control

Powering on the appliance

The appliance does not have a dedicated ON/OFF switch. To power the appliance, plug the mains cable into a wall socket and use the socket's ON/OFF switch to turn the appliance on or off.

When switched on, the appliance will emit an audible beep and automatically start with the flame effect activated.

Steps to pairing remote

1. Turn the appliance ON by plugging the mains cable into the wall socket.



2. Within **one minute** of powering on, press and hold  and  buttons on the remote for **three seconds** to initiate pairing.



3. The remote display will flash "b1" for 10 seconds, then return to the previous screen



4. The remote is now paired to the appliance and ready to use.



Scan to watch how the remote is paired



10.0 Operating the appliance

Press the standby button on the remote to turn the appliance ON/OFF.

Remote control

The button distribution of the remote controller is as shown right, and the current state information of the electric fireplace, such as the flame-effect, fuel bed, setting, temperature and time set, are all displayed on the remote control screen.

1. Standby

Turns the appliance ON/OFF standby, the default settings are: heater set to 82°F/27°C, the main flame effect is F1, the Fuel bed is L1 (no temperature display).

2. Flame Control

Changes the flame effect brightness F1, F2, F3, F4, F1 (cycle adjustment)

3. Heater

The Heater button switches to the temperature adjustment option when the weekly timing function is adjusted. Then use the $\oplus$ and $\ominus$ buttons to select the desired temperature. The temperature cannot be adjusted while the daily timer control is in use. Only the heating function can be switched.

Temperature Setting range:

Centigrade: 17–27° Fahrenheit: 62–82°

To change the temperature reading from Centigrade to Fahrenheit, or vice versa, Press and hold the  heater button for three seconds.

4. Fuel Bed

Changes the color of the fuel bed. L1, L2, L3, L4, L5 & L6 (cycle adjustment).

5. Sleep Timer

Adjusts the timer: 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H, OF, 1H (cycle).

6. Down Lights

Turn the downlights ON or OFF.

7. Time and Weekly Settings

Press to enter the time and weekly timer settings.

8. Lower temperature

Press to lower the temperature by -1° incrementally.

9. Raise Temperature

Press to raise the temperature by $+1^{\circ}$ incrementally.

10. Date Set


To choose from Monday to Sunday or weekly timer mode option.

Option mode: 1-2-3-4-5-6-7-A-oF.

11. Rear Lights

Changes the colour of the rear LEDs: b1, b2, b3, b4, b5. b6, b7, b8

10.0 Operating the appliance – Cont.

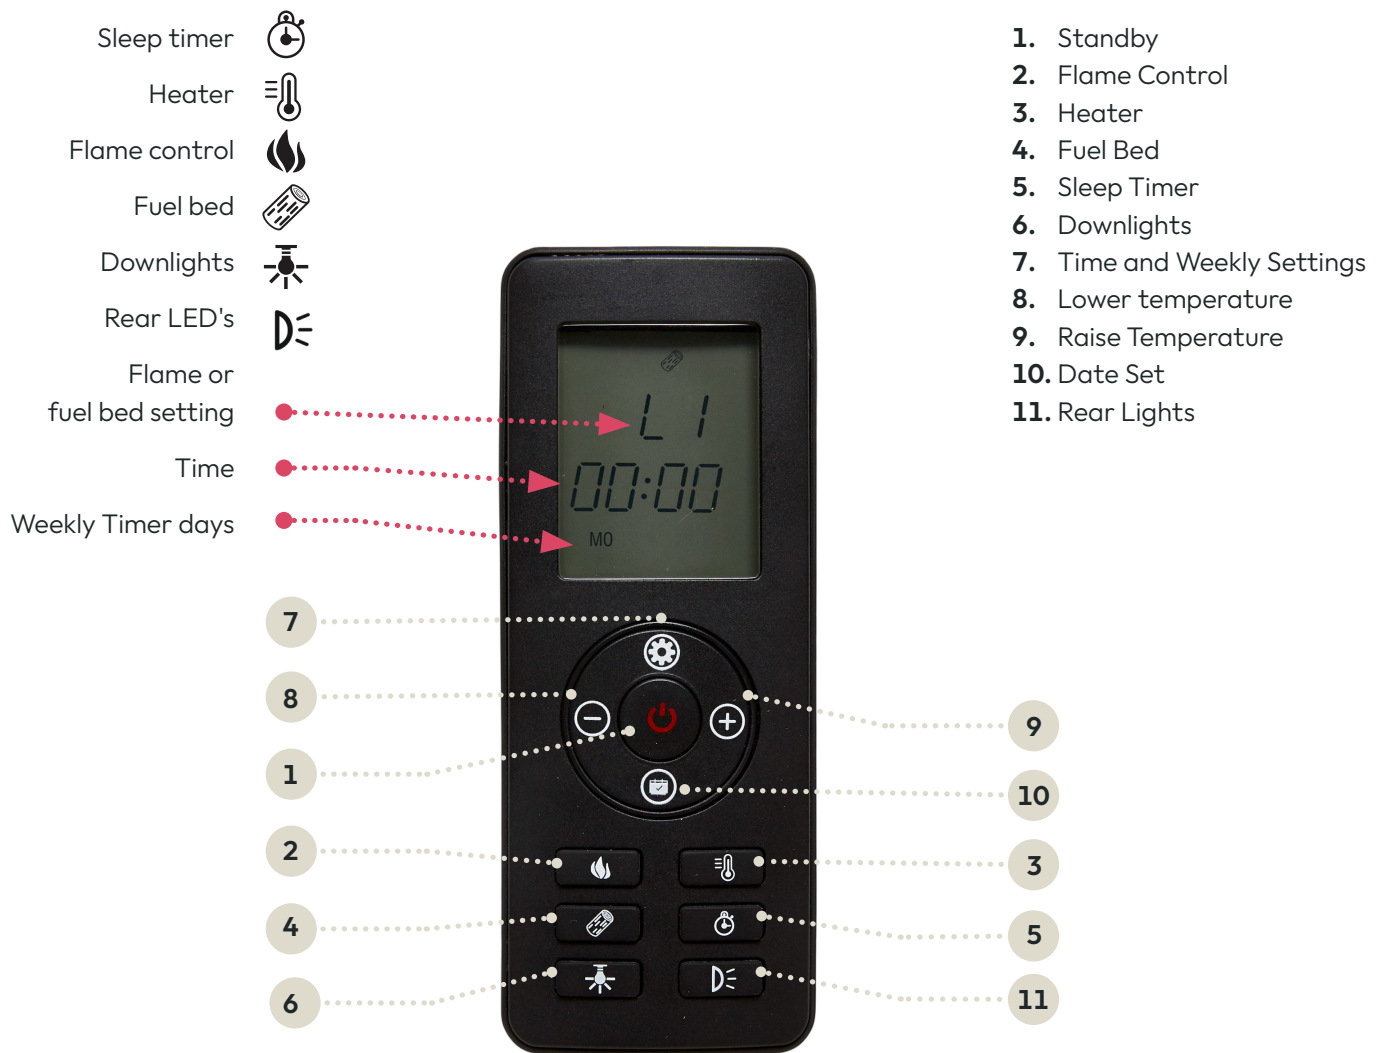

10.0 Operating the appliance – Cont.

Standby Button:

Turns the appliance ON/OFF standby, the default settings are: heater set to 27°C, (82°F) the main flame effect is F1, the Fuel bed is L1 (no temperature display).

Changing Flame Effect:

In the power-on state, press this button, the digital screen displays the flame position and the flame indicator is bright, and the main flame position can be adjusted. The flame brightness settings are: F1, F2, F3, F4, Set as follows:

Button	Display	Flame Effect
1st Press	F1	High
2nd Press	F2	Medium
3rd Press	F3	Low
4th Press	F4	Cycle through settings

Heating Operations:

1. Press the heater button to turn the heating function on and off and adjust the temperature setting. Heater is divided into temperature settings: 17–27°C 62–82° F (Cycle)
2. Press and hold the heater button for three seconds to convert the temperature unit from °C to °F. The temperature display window will flash. After the temperature is set, the display unit will flash five times, then automatically save the settings and exit the setting state. After the display unit is turned on, if there is no operation within 10 seconds, the setting status is also exited.
3. **Fan delay function:** After the appliance is turned off, the fan will continue running for 15 seconds then stop.

Open Window Detection function: When the appliance is heating and the ambient temperature suddenly drops $\geq 5^{\circ}\text{C}$ ($\geq 11^{\circ}\text{F}$) within 10 minutes, and the environment cannot be warmed up within 30 minutes the appliance will automatically display “OP”. The heating function will then be automatically turned off, and when the “OP” is displayed, it can be turned off and then restarted by turning off and on the appliance to clear the fault code.

4. This appliance has a non-self-resetting overheat protection device (thermal cut-out) which will activate if the air inlets or outlets are obstructed. For safety reasons the fire will NOT switch on again automatically, the following procedure must be carried out before the fire can be operated.

Switch OFF the appliance at the wall socket or outlet. Leave the fire OFF for a period of no less than 10 minutes, ensuring all obstructions are removed. Switch the appliance ON at the wall. Ensure the appliance is turned ON at the control switches. If the fire fails to operate correctly, repeat the above procedure.

Refer to section 11.0 for more information about the Safety Cut-Out System.

10.0 Operating the appliance – Cont.

Fuel Bed Color Options:

Once powered, press the Fuel Bed button  and the LCD screen on the remote will display the fuel bed icon. Now, the fuel bed color can be adjusted. The different Fuel bed light settings are: L1, L2, L3, L4, L5 & L6. See below:

Button	Display	Flame Effect
1st Press	L1	Orange
2nd Press	L2	Red
3rd Press	L3	Orange + Red
4th Press	L4	3 Colour Fade
5th Press	L5	Orange Fade
6th Press	L6	Red Fade

Setting Sleep Timer:

In the timed display, press the Sleep Timer button  to adjust the time, plus one hour for each press. (You can't enter the weekly timing selection, you can only set the current automatic shutdown time. This function is available when the weekly timing function is turned on. Will not operate). Timing range: 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H, 9H, OF, 1H (cycle adjustment).

Control Down Lighting:

Turns the down lighting lights on and off.

Control Rear Lighting:

Button	Display	Rear Lighting Effect
1st Press	b1	Blue
2nd Press	b2	Orange
3rd Press	b3	Purple
4th Press	b4	Cycle through settings
5th Press	b5	Off
6th Press	b6	Blue pulsing
7th Press	b7	Orange pulsing
8th Press	b8	Purple pulsing

Setting Clock and Timer:

Use the date button to choose from Monday to Sunday or weekly timer mode option. Option mode: 1-2-3-4-5-6-7-A-oF.

10.0 Operating the appliance – Cont.

Clock setting:

1. In the standby state (after the unit is plugged in and before pressing main power), press and hold the  Setting button on the remote for three seconds, the digital display will then flash 00:00.
2. Press  on the remote control to set the hour, press the remote control  to set the minutes.
3. Press  to enter the day of the weekly timer. Press  to select Sunday to Saturday, The date symbol will light up after the day is selected. When finished, press the  button to exit setting.

Note: The current clock must be set after the initial power-on or power-off, otherwise the clock will remain “00:00” status and you won’t be able to set the weekly timer function.

Heat settings:

Use the remote control’s Heater button  to select the temperature. The system default parameters are: 27°C. Press  &  buttons to select the temperature when the heating is turned on. Temperature range: 17°–27°C; ON; 17°C; (Cycle).

Timing switch ON/OFF preset:

1. While in the standby state, press the sleep timer button  on the remote for three seconds to pre set timing switch on/off the weekly timer. Enter mode 1, while the display is 1 ON, the clock will be 01:00, press  to set hour, press  to set minute, press  to set the week, every press on the  will show SU, MO, TU, WE, TH, FR, SA and flash in turn, you can use the  key to select or de-select the desired date. The  indicates all of the selected days. Press the Heater button  to enter the temperature setting, then press the  &  button to set temperature.
2. Press Setting  again to set the timer switch off, the display is 1 OFF, the clock is displayed as 02:00, press  to set hour, press  to set minute, the date of the timer off is the same as the timer on, you can’t change this manually. After setting, press  to enter the setting of mode 2, which operates the same as mode 1. You can set mode 1 to mode 7 with the above method. Press  or  on the remote for 3-seconds to save setting and exit weekly timer setting.
3. After the preset timing ON/OFF switch, you can use the clock/timer  button to select the desired timing mode 1–2–3–4–5–6–7– auto option, after the option shows five seconds without any operation, it will save the selected option and enter the current setting of the option, the timer logo of the display lighten and will automatically run the preset switch setting program. You can individually select each setting of modes 1–7 for automatic ON/OFF switching, or you can preset the desired settings, and then select auto mode for multiple preset series executions.
4. If you want to set the on/off switch and temperature setting for different periods of the week, then set the switching time and temperature of each day from Sunday to Monday in mode 1–7. After setting, use the auto mode to run timing switch and then the system will run the weekly timer of 1–7 modes. You can also set 1–7 modes within one day, use the auto mode to run timing switch ON/OFF within one day. Be aware that when you use auto mode, you need to make sure the time settings do not overlap each other, otherwise the timer will not operate.
5. After entering the weekly timer setting, press the  button for three seconds to exit the week timer mode, then the timer symbol will be extinguished. You can

10.0 Operating the appliance – Cont.

check the 1–7 timer settings by pressing the Setting button . For example: press  to display (1 ON “01:00” temperature 27°C), press  again to display (1 OFF “02:00” temperature 27°C). Press the Setting button again to display (2 On “03:00” temperature 26°C) then press the Setting button to display (2 OFF “13:00” temperature 27°C). The wireless remote control and the appliance must be kept within 12 feet to prevent the remote control and the appliance from failing due to the distance exceeding the effective remote control range when working at the weekly timing. After the weekly time is turned on, the remote controller automatically controls the appliance at the set appointment time.

11.0 Safety cutout system

This product has one non-self-resetting overheat protection device (thermal cut-out) which will activate if the air inlets or outlets are obstructed. For safety reasons the fire will NOT switch on again automatically, the following procedure must be carried out before the fire can be operated.

NOTE: The visual effect will remain operational if the cutout is activated, only the fan heater is prevented from working.

Switch OFF the appliance at the wall socket or outlet. Leave the fire OFF for a period of no less than 10 minutes, ensuring all obstructions are removed. Switch the appliance ON at the wall. Ensure the appliance is turned ON at the control switches. If the fire fails to operate correctly, repeat the above procedure. If an attempt to switch on the appliance is made before the safety cutout has reset, the appliance may cutout for a further period of time. If the sequence has been followed correctly and the appliance still fails to function, check the fuse in the wall outlet. If this is not the cause, call an electrician or maintenance engineer.

12.0 Cleaning and maintenance

Always disconnect the stove from the mains supply before any maintenance.

For general cleaning use a soft clean duster – never use harsh abrasives or cleaners. The glass viewing screen should be cleaned carefully with a soft cloth.

If in doubt consult a qualified electrician. Refer to Section 7.0 Appliance Data for fuse specification. Excluding fuses, use only genuine manufacturers spare parts available from your supplier.

Replacing the remote control battery:

When the battery becomes weak, the range of the remote control becomes shorter. Replace with two new AAA batteries.

1. Slide open the battery cover on the back of the remote control.
2. Insert two new AAA batteries into the remote control.
3. Place the battery cover back onto the remote.

NOTE:
Keep the batteries out of the reach of children.


13.0 Troubleshooting guide

My Hinton Stove...	Remedy
is not switching on	Check there is power to the outlet or fuse.
is not emitting any heat	The fire is fitted with an energy saving thermostat. If the temperature in the room is higher than the temperature selected on the fire, then the thermostat will stop the heater from turning on. For example, if the room temperature is 22°C or above and the fire's heater is set at 22°C, then the heater will not be required until the room temperature drops below 22°C. If this is the case select a higher temperature setting than the room's temperature and the heater will begin to operate. The safety cut-out may have been operated. Switch the appliance off, leave for 10 minutes then switch back on.
shuts off after a period of time	Check the temperature is not set on a lower setting. If the room is warm enough the thermostat will stop the heat from switching on. Check that the air inlet/outlet is not blocked. Check that the window detection sensor has not been activated.

Fault Condition	Heater Fault	There is a fault with the heater. Check that the temperature is not set onto the lower settings. If the room is warm enough the thermostat will stop the fire switching the heat on. Check that the air vents are not blocked off.
	Electrical Fault	There is an electrical fault. A service engineer will need to check the thermostat for any loose connections.
	Open window detection	The open Window Detection function is in operation, this operates when the appliance is heating and the ambient temperature suddenly drops $\geq 5^{\circ}\text{C}$ within 10 minutes, and the environment cannot be warmed up within 30 minutes, resulting in the appliance automatically displaying OP . The heating function will then be automatically turned off, and when the OP is displayed, it can be turned off and then restarted by turning off and on the appliance to clear the fault code.

14.0 Spare parts


Refer to Section 7.0 Appliance Data for LED and fuse specification. Excluding LEDs and fuses, use only genuine manufacturer spare parts available from your supplier.

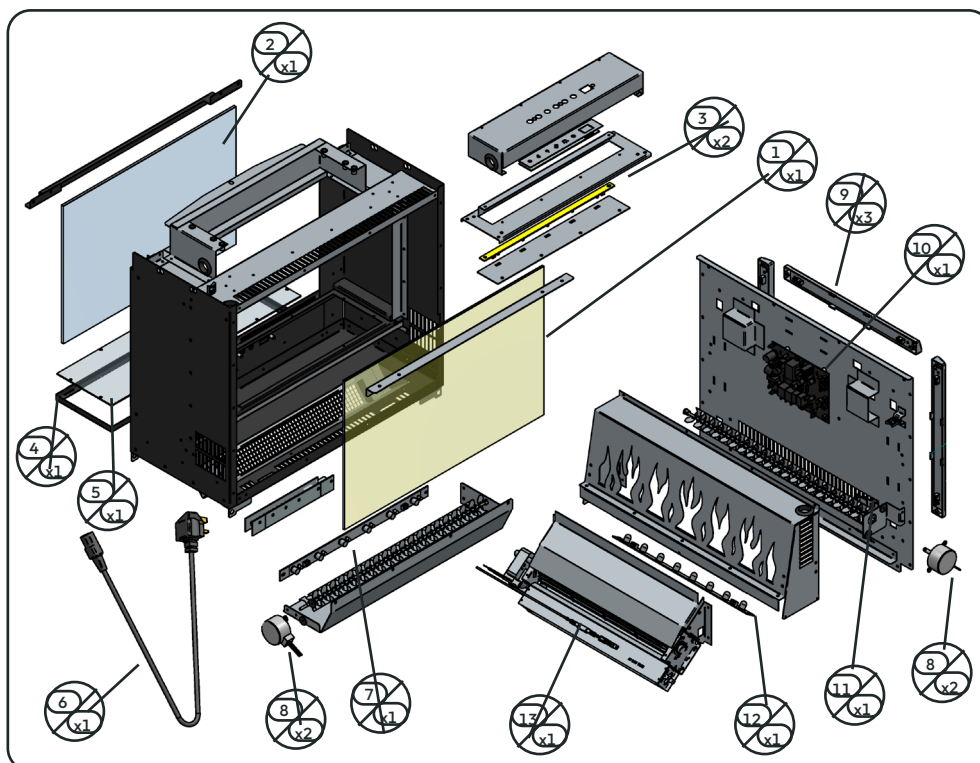

Item #	Hinton#	Part Name	Qty
1	F960373	Front Glass Panel	1
2	F960374	Rear Glass Panel	1
3	F960376	Downlighting LED	2
4	F960377	Fuelbed Tray	1
5	F960378	Frosted Fuelbed	1
6	F960379	IEC Mains Cable	1
7	F960380	Fuelbed LED	1
8	F960381	Rotisserie Motor	1
9	F960382	Frosted Rear LED Assy	3
10	F960383	Main PCB	1
11	F960384	NTC Thermostat	2
12	F960385	Flame Effect LED	1
13	F960386	Fan & Heater Assy	1

15.0 Specification sheet – Fireboxes

Hinton Stove	
A	595.0 mm
B	628.0 mm
C	613.0 mm
D	314.0 mm
E	371.5 mm

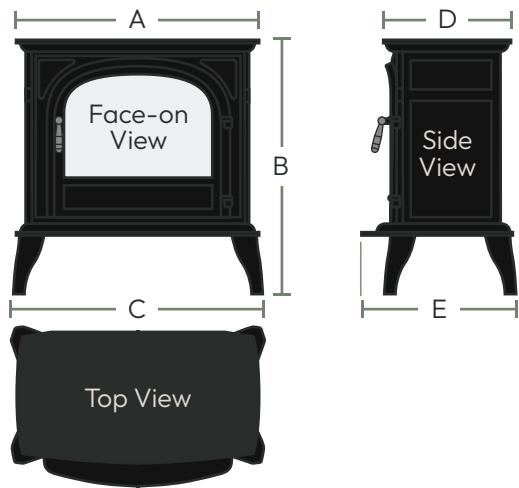

Hinton Cast Iron Stove Features

- Freestanding installation
- Remote control
- Full thermostatic control
- Timer control options
- Downlighting
- Three fuel bed colours (Orange, Red, Orange-Red)
- Three rear chamber lighting colours (Blue, Orange, Purple)

Tech Specs

- Supply voltage.....220–240V AC
- Supply Frequency 50Hz
- Heat output1500W
- Lighting.....LED
- Certification..... UKCA, CE

Black Edition Features

- Deluxe Real Logs
- Rear Black Glass
- Upgrade to AR Glass

AR Glass = Anti-Reflective front glass

16.0 Servicing

Mains lead wiring


WARNING:
Never connect Live or Neutral wires to the Earth terminal of the plug.

The mains lead wires are coloured as indicated in the following table:

Blue/Black	Neutral
Brown/Red	Live
Green/Yellow	Earth

If the colours of the wires in the mains lead of this appliance do not correspond with the colour markings in the terminals of your plug then please proceed as follows: The blue wire must be connected to the terminal marked with an **N** or coloured black. The brown wire must be connected to the terminal marked with an **L** or coloured red. The green/yellow wire must be connected to the earth terminal which is marked with an **E** or with the earth symbol.

PLEASE NOTE:
If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket. Refer to Section 7.0, Appliance Data for appliance specification. Use only genuine manufacturers spare parts available from your supplier.

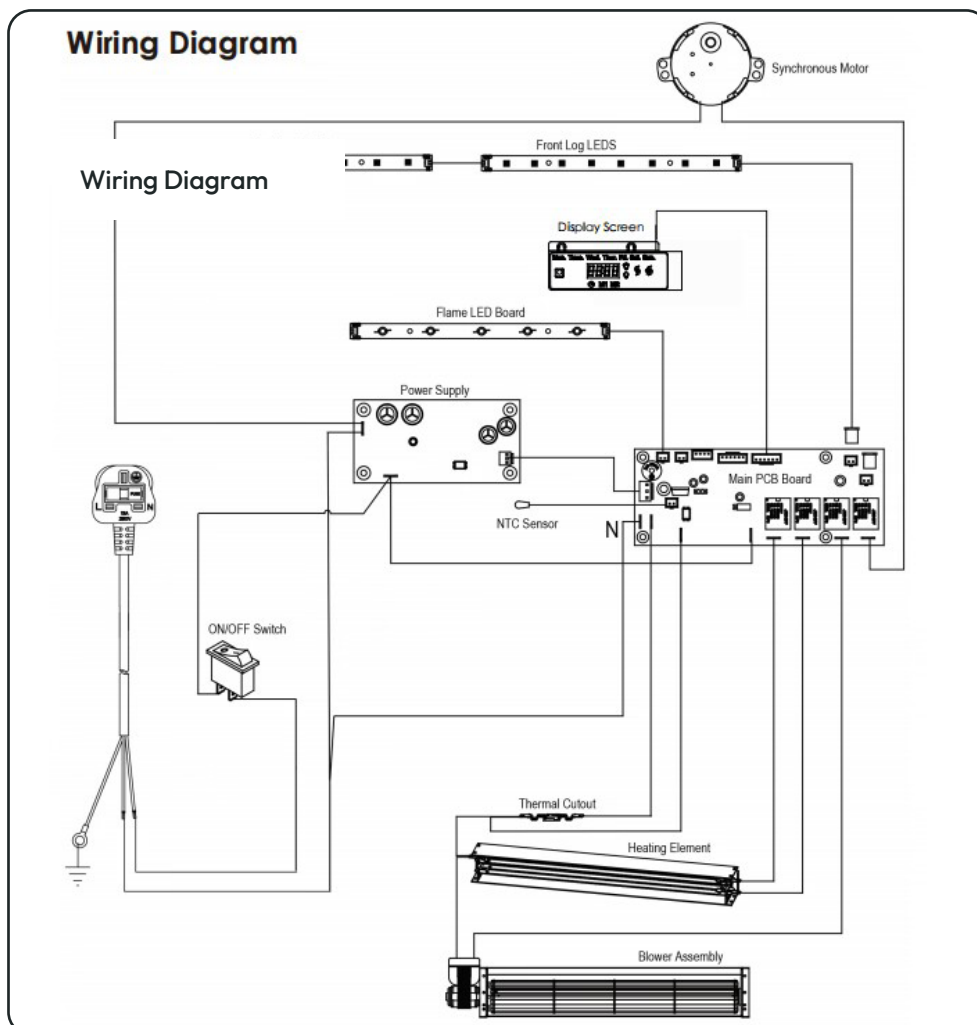

17.0 Terms & conditions, guarantee

Automatic 1-year Guarantee

We offer a standard one-year guarantee on every electric appliance.

Register for the Free 3-year Guarantee

To cover your appliance for a further two years, free registration is required on our website at www.britishfires.com/guarantee. Full guarantee terms & conditions are available to view at www.britishfires.com.

5-Year Guarantee Upgrade

If you have purchased a 5-Year Guarantee upgrade there will be a card in the packaging with a unique code. Enter that, with all of the other information requested at www.britishfires.com/guarantee to validate the guarantee upgrade.

Terms & Conditions

All appliances must be installed in a correctly ventilated space in accordance with the manufacturer's installation instructions and the rules in force. All of our fires carry UKCA & CE Approval. July 2026 British Fires™. For full terms and conditions, please visit our website.

1. For any claim to be made within three years from date of purchase you will be required to provide and supply your original proof of purchase.
2. All appliances must have been installed and operated in accordance with the manufacturer's instructions.
3. Purchase(s) must be made through an authorised stockist/retailer.

Please note all consumable items such as any ceramics, including coals, pebbles, logs, bark, crystals, rear panels are not covered by the 3- or 5-year guarantee.

During the guarantee period any appliance or component which is proven to be faulty or defective in manufacture, will be repaired or replaced free of material and labour charges, providing that we have authorised or carried out the repair or replacement.

We will not accept or reimburse the costs of any third party who undertakes any work carried out on the appliance or fits parts, unless we have approved such work in advance of it being carried out.

The guarantee period will not be extended under any circumstances.

Making a claim:

If you wish to make a claim under our guarantee and all the terms and conditions for your appliance have been met then please submit the details requested below to: Guarantee@britishfires.com

Details required:

1. Name, Address & Contact phone number.
2. A copy of your proof of purchase (e.g. receipt or bank statement).
Please note that this does not affect your statutory rights.
3. Brief description of the issue and supporting images, if possible.

Scan the QR code below to register your appliance.



Share your finished installation with us!

You are invited to join our social community and share your British Fires project with us online. We love to see the different styles and trends our fires work with when displayed in all their glory.

How to share your British Fires project with us

Upload an image or video to showcase your finished installation.


Tag us on one of the social media sites listed below for a chance to get featured.

 facebook.com/britishfiresuk

 [@britishfires](https://instagram.com/britishfires)

 tiktok.com/@britishfires

 youtube.com/@britishfiresuk

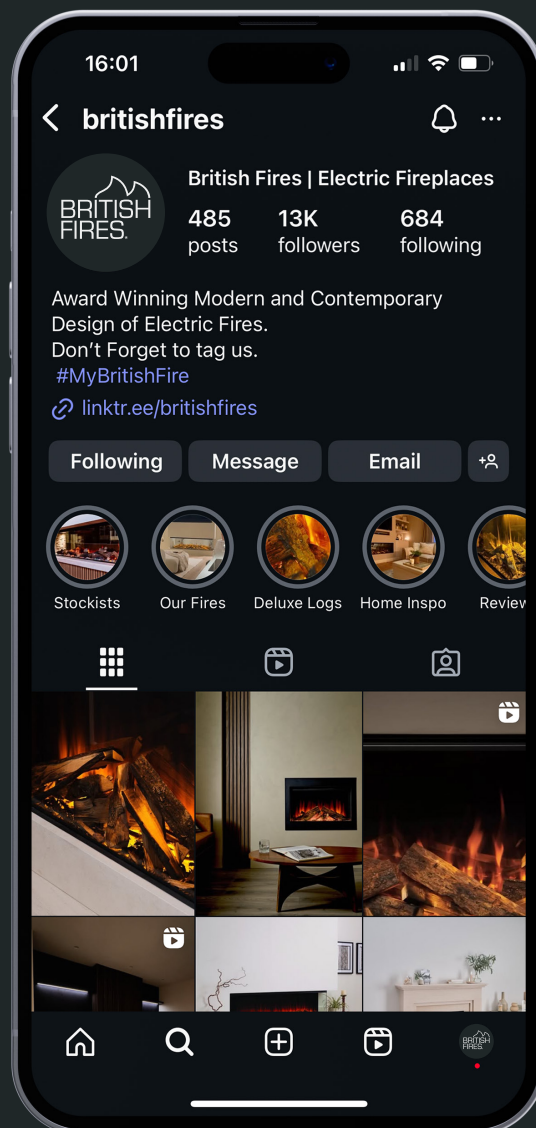

Enjoy your British Fire



This product complies with conformity requirements of the applicable UK Regulations.



This product complies with conformity requirements of the applicable European Regulations or Directives.



Waste electrical appliances should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Model covered by these instructions:
Hinton Stove

SK5353

It is advised to keep this
document for future reference.
Revision D – 07/26

British Fires Ltd.
Unit 10 Avon Trading Park
Christchurch, Dorset
BH23 2BT,
United Kingdom

RBK House
Irishtown, Athlone
Co. Westmeath
N37 XP52, Ireland

T: 0808 169 9911
W: britishfires.com
E: sales@britishfires.com